



Steckerbelegungen / Pinouts


4 poliger Klinkenstecker / 4 conductor plug (AFU-Interface 100,110)
YAESU VX-1R, VX-2R, VX-5R, FT-50, ICOM IC-Q7, IC-R2

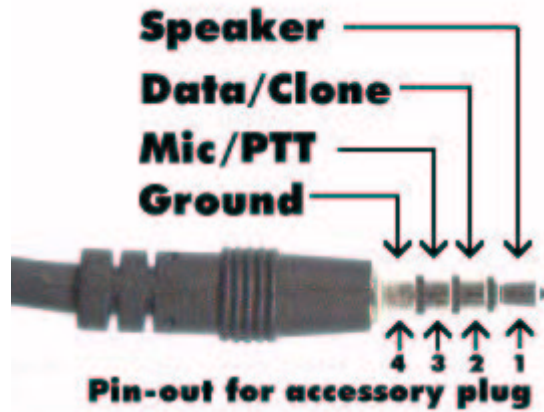

Mikrofon- und Lautsprecherbuchse / Microphone / Speaker socket (AFU-Interface 110)

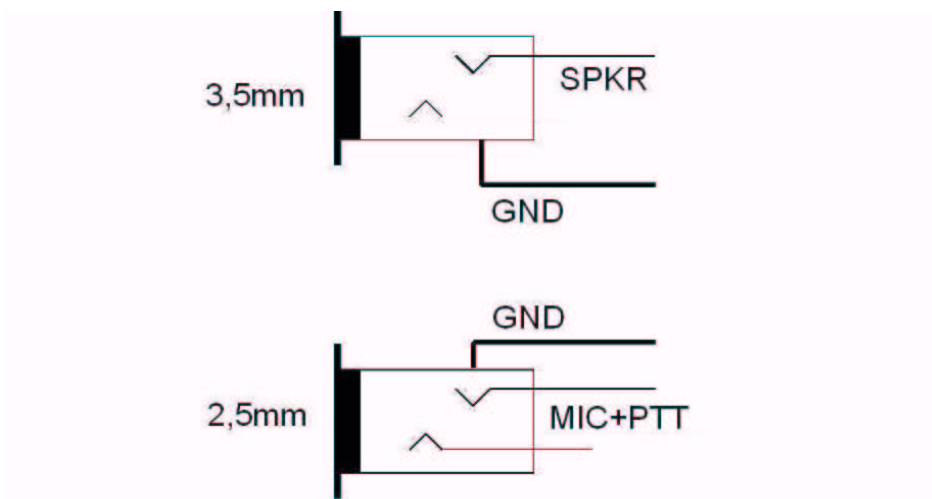


USB- Buchse / USB Socket (AFU-Interface 110)

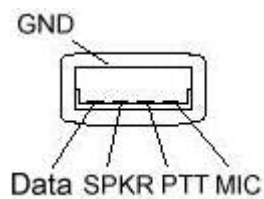


Buchse Draufsicht / Socket front view

DIN- Stecker zum TNC/ Modem Anschluß (andere Stecker auf Anfrage)
DIN plug for TNC/Modem connection (other plugs on request)
(Kabel für / cable for AFU-Interface 110)

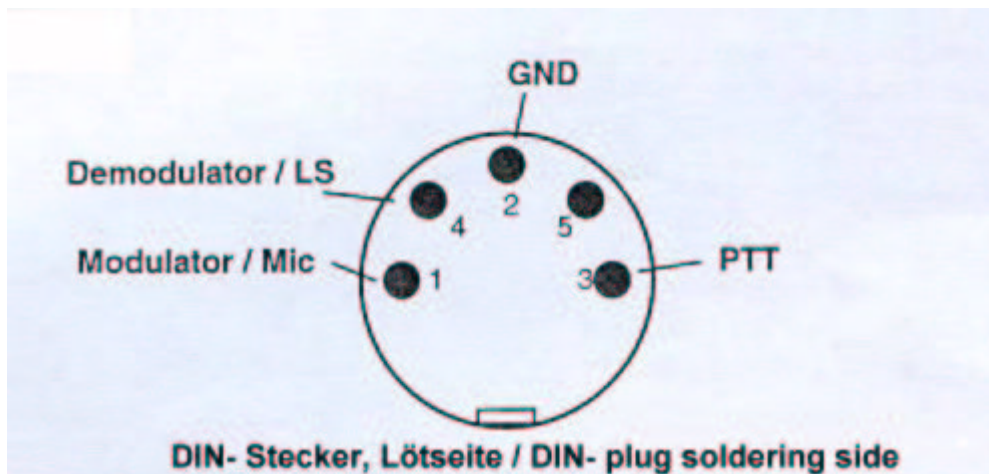

6 poliger DIN Stecker / 6 pole DIN Plug (AFU-Interface 200)
KENWOOD TS-50, TS-140, TS-450, TS-570, TS-680, TS-690,
TS-711, TS-811, TS-850, TS-870, TS-940, TS-950

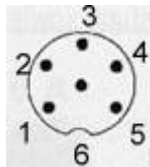


Funkgerät Buchse Draufsicht / TRX Plug Front View
1 - GND, 2 - TX Data (TRX), 3 - RX Data (TRX), 4 - CTS (TRX), 5 - RTS (TRX), 6 - NC

2 poliger Klinkenstecker / 2 conductor plug (AFU-Interface 500)
ICOM CI-V




8 poliger Mini DIN Stecker / 8 pole Mini DIN Plug (AFU-Interface 600)
 YAESU FT-817, FT-857, FT-897, FT-100

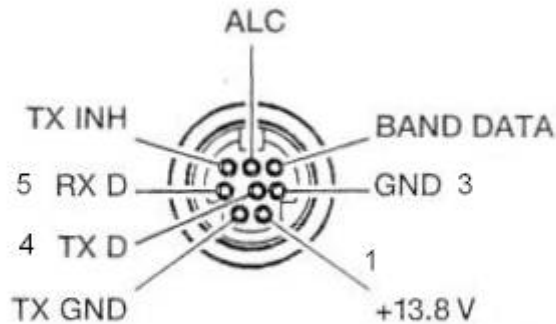


Stecker Lötseite / plug soldering side

6 poliger (Mini) DIN Stecker / 6 pole (Mini) DIN Plug (AFU-Interface (610) /620)
 YAESU FT-757GXII, FT-840, FT-890, FT-900
 YAESU FRG-100,FRG-8800, FRG-9900, FT-736,
 FT-747, FT-767, FT-980, FT-990, FT-1000(D)
 HEATH SB-1400

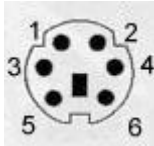

610

Lötseite / soldering side

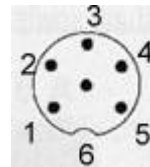


620


1 - GND, 2 - Serial OUT (TX Data), 3 - Serial IN (RX Data), 4 - PTT, 5 - NC, 6 - NC

3 poliger Klinkenstecker / 3 conductor plug (AFU-Interface 700)

ALINCO DJ-X10
 IC-T8, IC-T81, IC-W32
 YAESU FT10, FT11, FT40, FT41, FT51

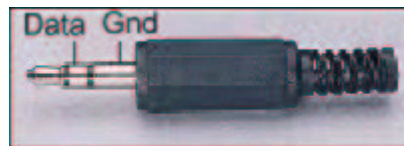

6 poliger Mini DIN Stecker / 6 pole Mini DIN Plug (AFU-Interface 800)
 YAESU FT3000, FT8000, FT8100, FT8500

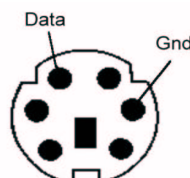

2,5 / 3,5 mm Klinenstecker / 3 conductor plugs (AFU-Interface 900)

KENWOOD TH-D7, TH-F7, TH-G71


2,5mm Stecker / plug:



3,5mm Stecker / plug:



USB- Buchse / USB Socket (AFU-Interface 1000)

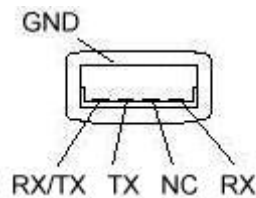


Buchse Draufsicht / Socket front view

Computer- Interface (alle typen / all types)

- 2 - Receive Data (RxD),
- 3 - Transmit Data (TxD),
- 4 - Data Terminal Ready (DTR),
- 5 - Ground,
- 7 - Request to Send (RTS)



Jumper

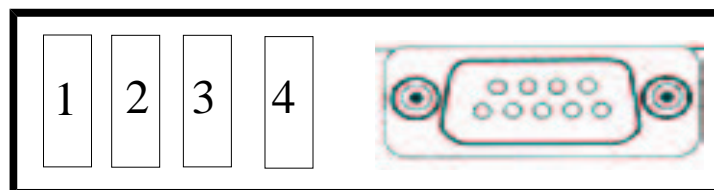

Interface	Jumper 1	Jumper 2	Jumper 3	Jumper 4
100,110	Set for ICOM	Not set	Not set	Set = RTS Control (PTT) enabled
1000	Not set	Set for RX & TX on separate lines (e.g. FT-817). Don't set for RX/TX on one line (e.g. ICOM CIV).		Not set